



Simon XT wirefree system

Arming - Away: (when going out) Press Away button + 5 digit user code

Arming - Stay: (when staying in) Press Stay button + 5 digit user code

Silent Arming Press Stay button + 5 digit user code + Silent Button

Note:

Your system will fail to arm if;

- a) You arm the system, open the exit door and do not close it within the entry/exit time.
- b) You arm the system while a door or window protected by a contact sensor (this does not apply to inertia or motion sensors) is open and you do not either close it or bypass it.
- c) You do not acknowledge a system fault being reported by your control panel by pressing the Bypass button.

Disarming Press Disarm button + 5 digit user code

Bypass (when going out) Press Away button + 5 digit user code + Bypass button and enter
Arming system while any door, window, protected by a contact sensor only, is open

Bypass (when staying in) Press Stay button + 5 digit user code + Bypass button and enter
Arming system while any door, window, protected by a contact sensor only, is open

System Status If status button is lit, press system status button and message will be repeated.
If the system status button is lit, the system has an information message.

Panic Button - To activate a Fire or Emergency or Police panic, press the relevant button twice, or hold for 2 seconds

Should you activate a panic alarm in error, please wait for our call and do not engage the phone line. If we are unable to confirm that the alarm is false, the relevant emergency service will be dispatched and in some cases charges may apply.

